



## INSTALLATION GUIDE



1. Ensure floor surface is clean and free of dust. Check floor is flat and level. Apply leveling compound to floor if required

2. Install wall linings to framing


**3a. TILING FLANGE / GULLY TRAP PRE-INSTALLED**  
**Standard-size:** Position standard base against wall linings and trim base sides if needed for final alignment of base waste-hole to pre-installed tiling flange




**3b. TILING FLANGE / GULLY TRAP NOT INSTALLED**  
**Standard-size:** Position standard base against wall linings and mark position of waste-hole on floor

**Custom Size:** Position base against wall linings and mark location of waste-hole on floor


4. Install tiling flange and gully-trap to position as marked on floor

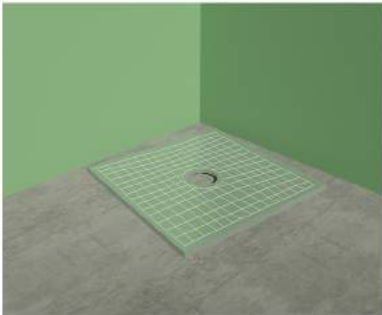

5. Turn base over and apply construction adhesive in a 50 x 50mm grid-pattern over the entire base plus a continuous bead around the base perimeter

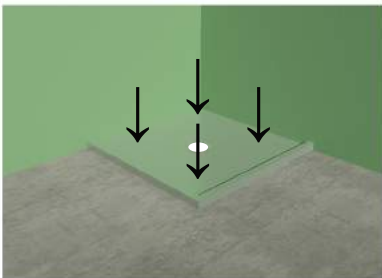

6. Place base into position against the wall linings and press base firmly over the entire surface. Apply weighted objects evenly over the base and allow the adhesive time to cure (dependent on temperature, flooring type, etc.)

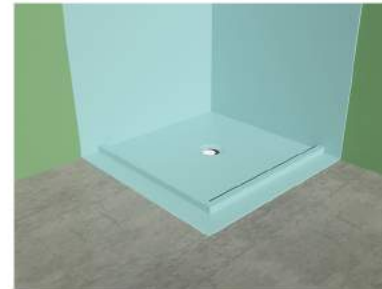

7. With TILE RITE base in place and adhesive fully cured, apply the waterproofing membrane to the wall linings, the entire TILE RITE base, and onto and down into the tile waste flange



8. Apply tile in accordance with the waterproofing and tile adhesive manufacturer's instructions



9. Install glass enclosure onto tiled shower